



DB04 組裝說明書

| ASSEMBLY MANUAL |

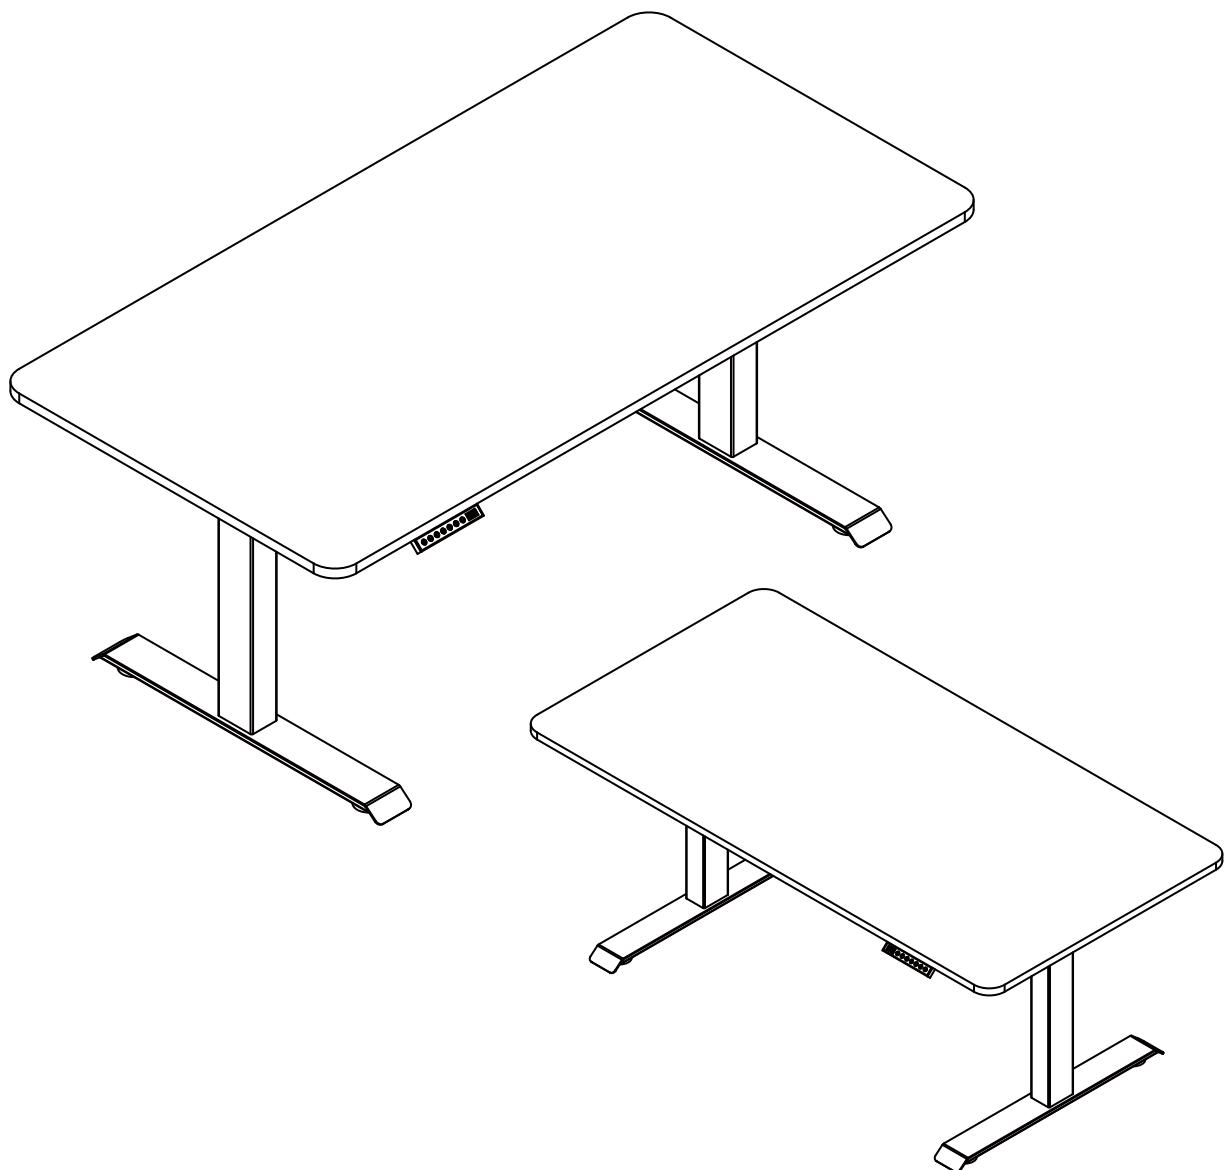

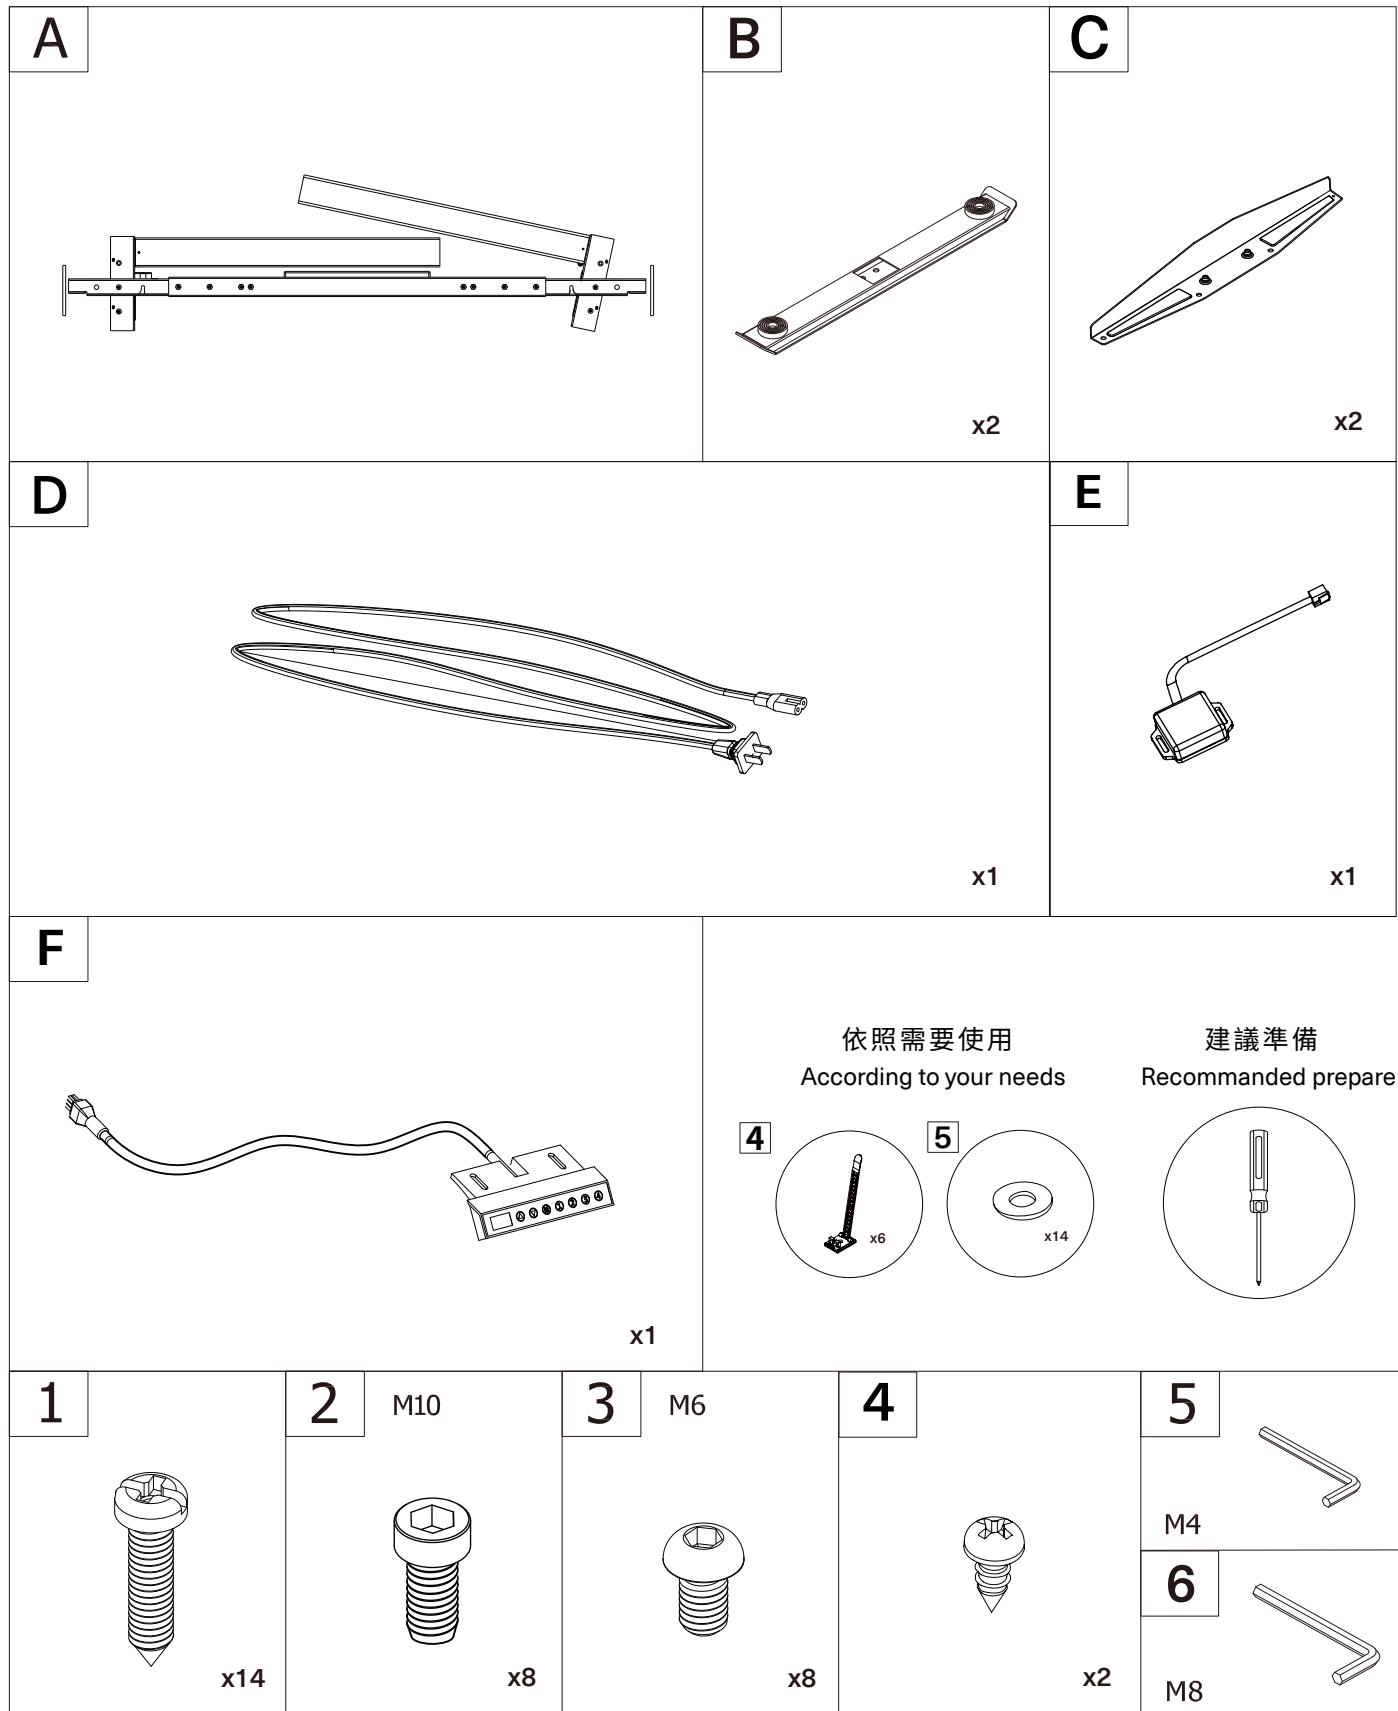


Step 1 轉開兩側桌腳

Fix the main column


先將預鎖螺絲轉鬆

Loosen the pre-lock screw first

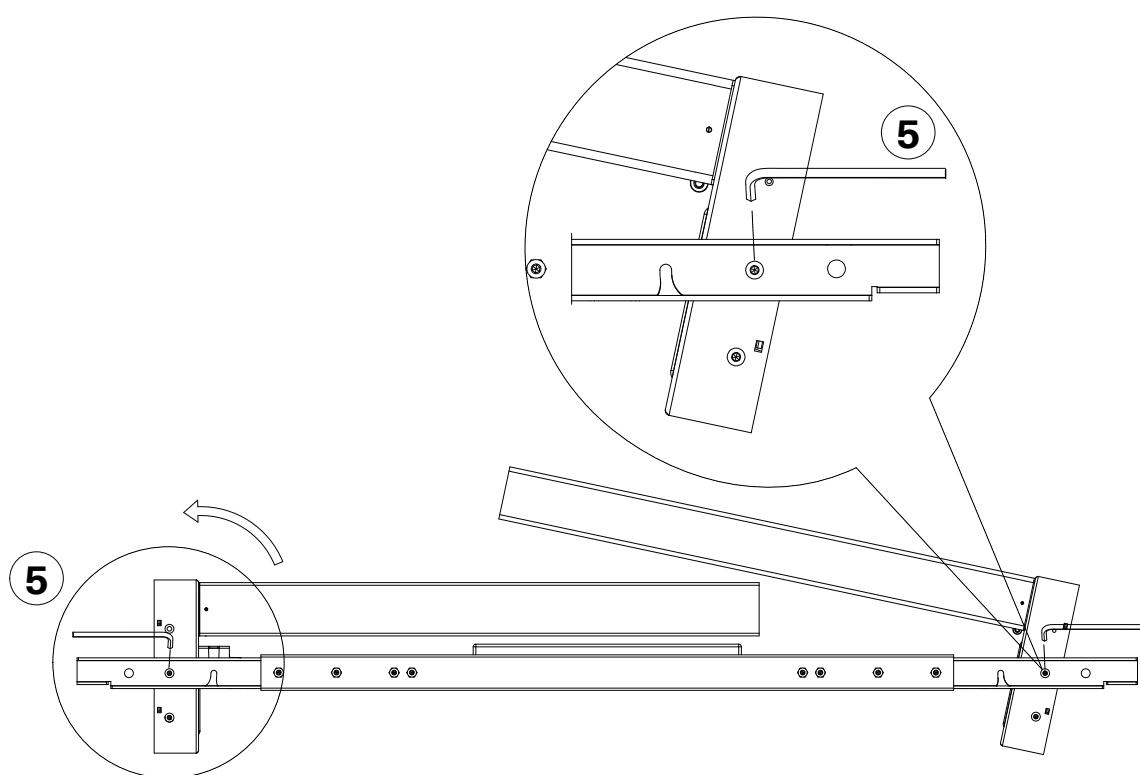


Step 2 安裝兩側固定板 Fix the both sub-frame

將兩側都鎖好固定

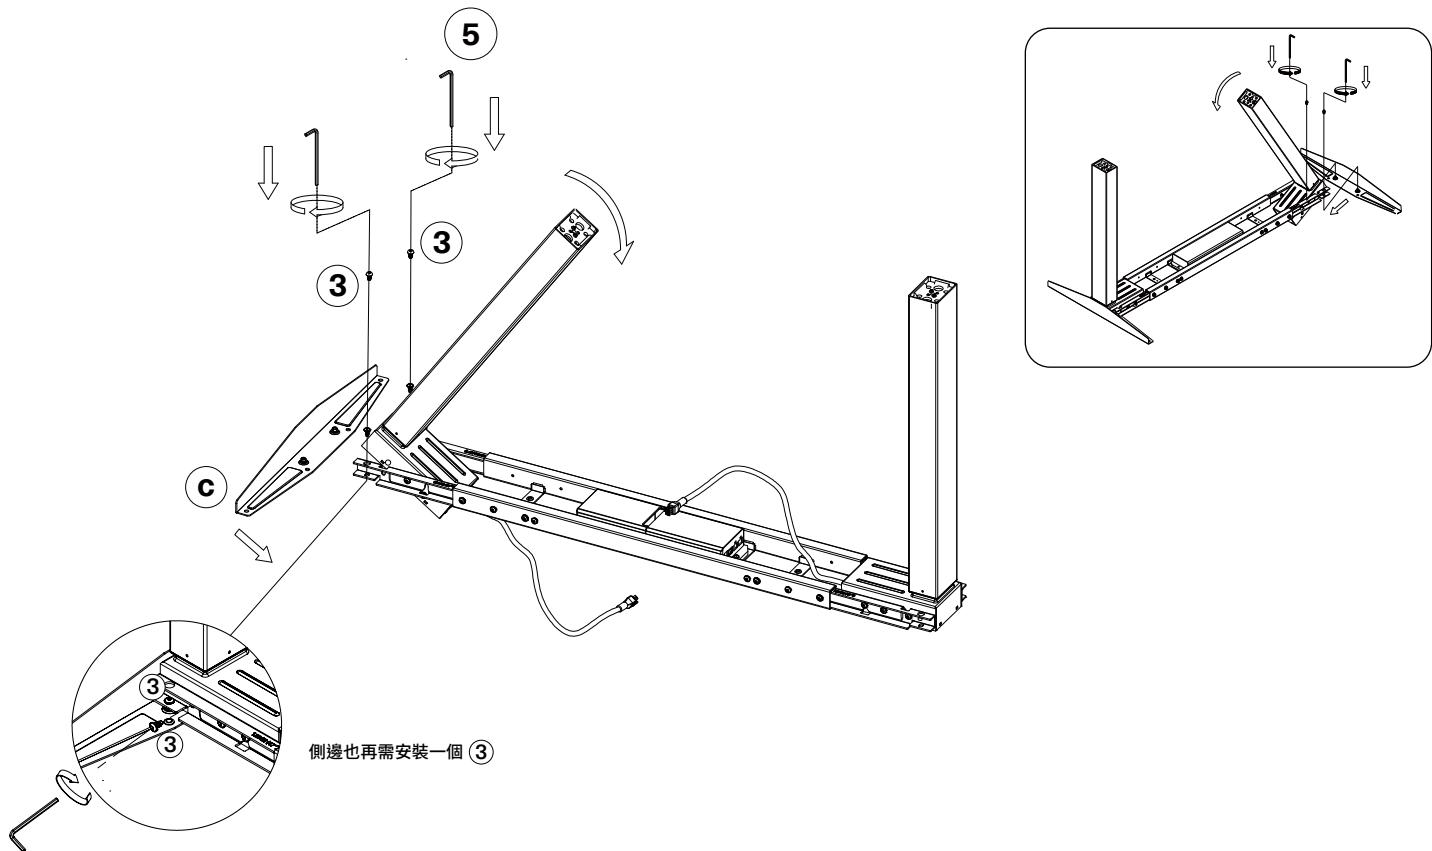



Step 3

安裝底座 Fix the motor holder

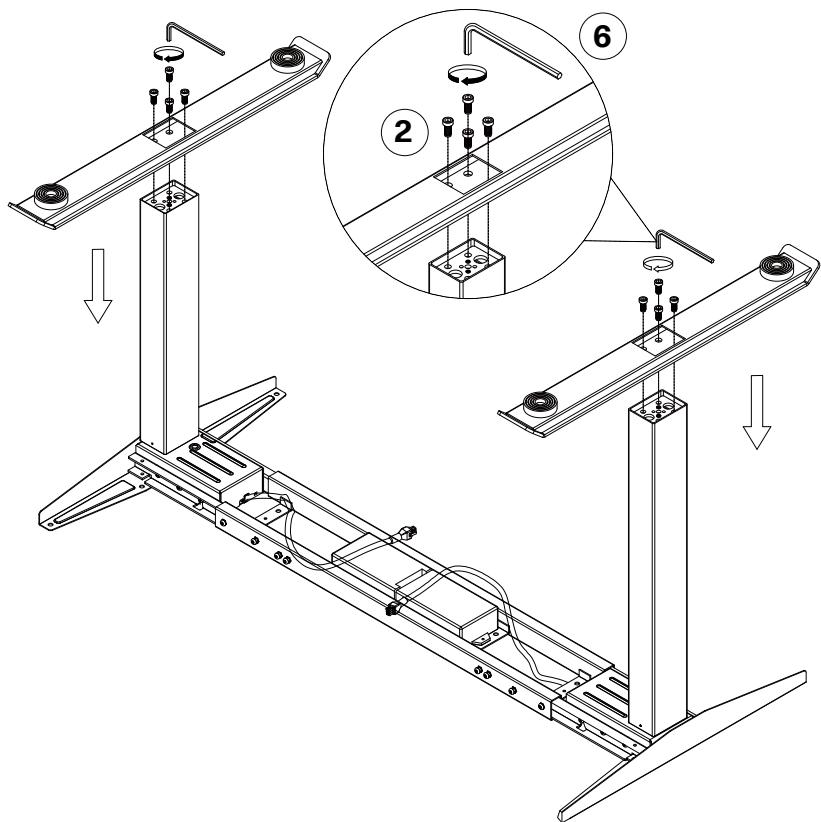


Step 4 調整桌架長度 固定桌板

Adjust the width, fix the desktop



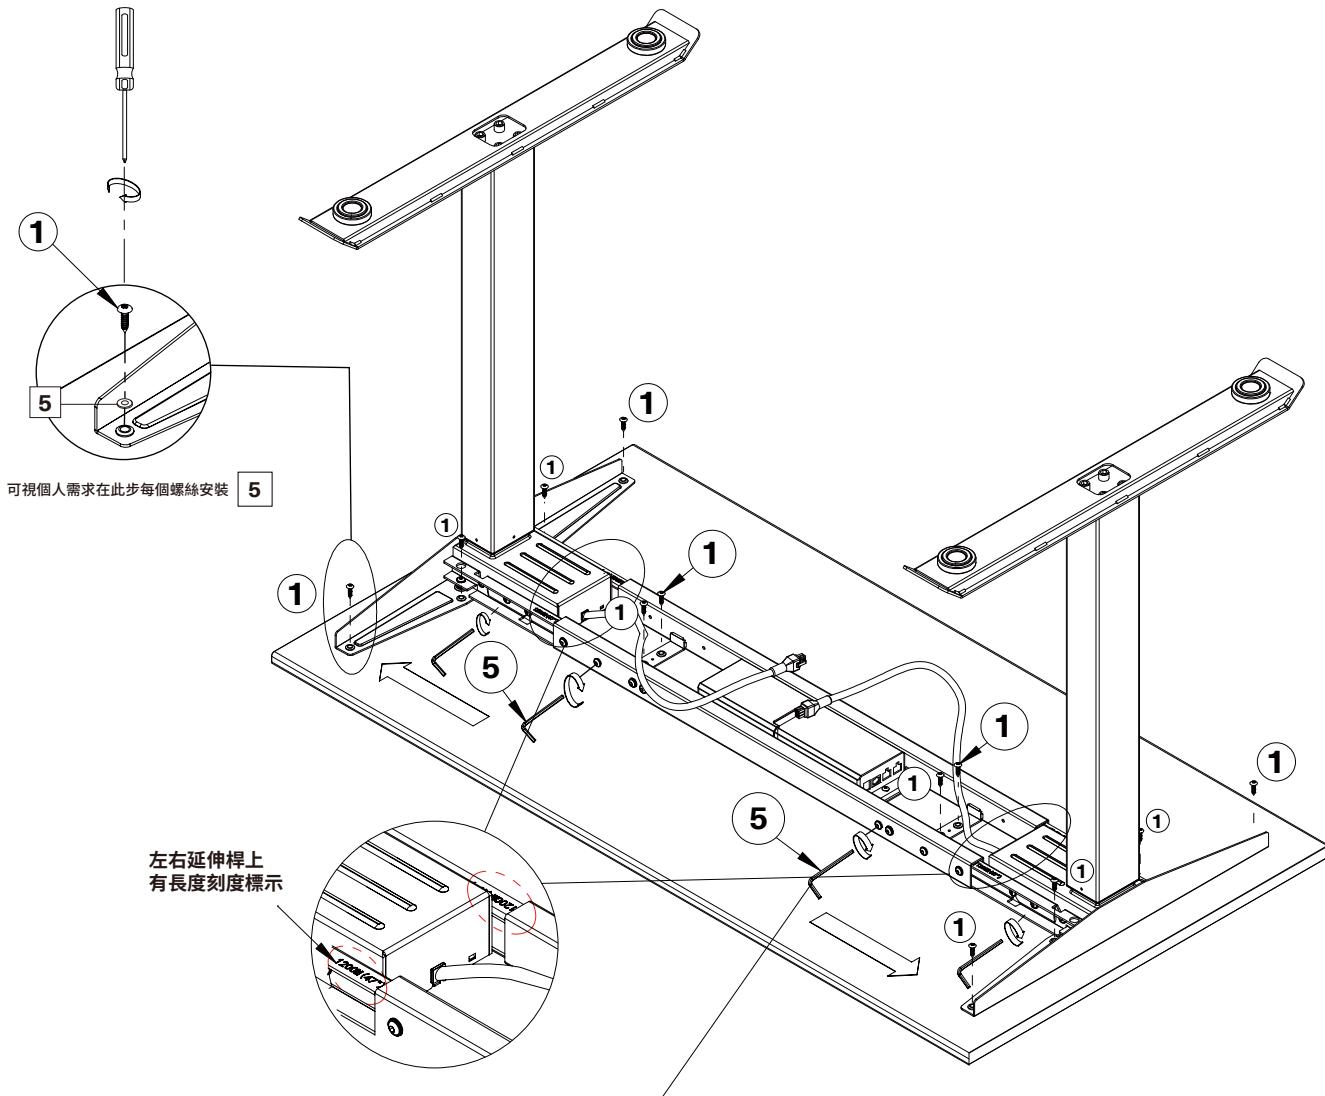
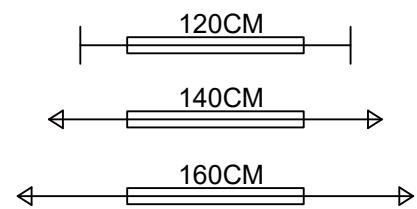


注意!
調整好所需寬度後，把側邊螺絲鎖緊

Fix bottom columns.
Adjust the length, then fasten the screws.

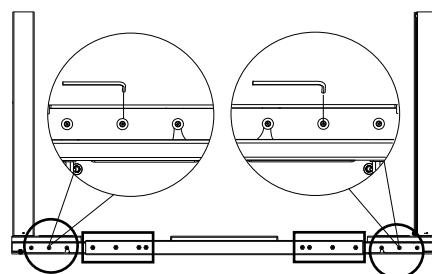


Step 5 安裝配件 Fix accessories and desktop

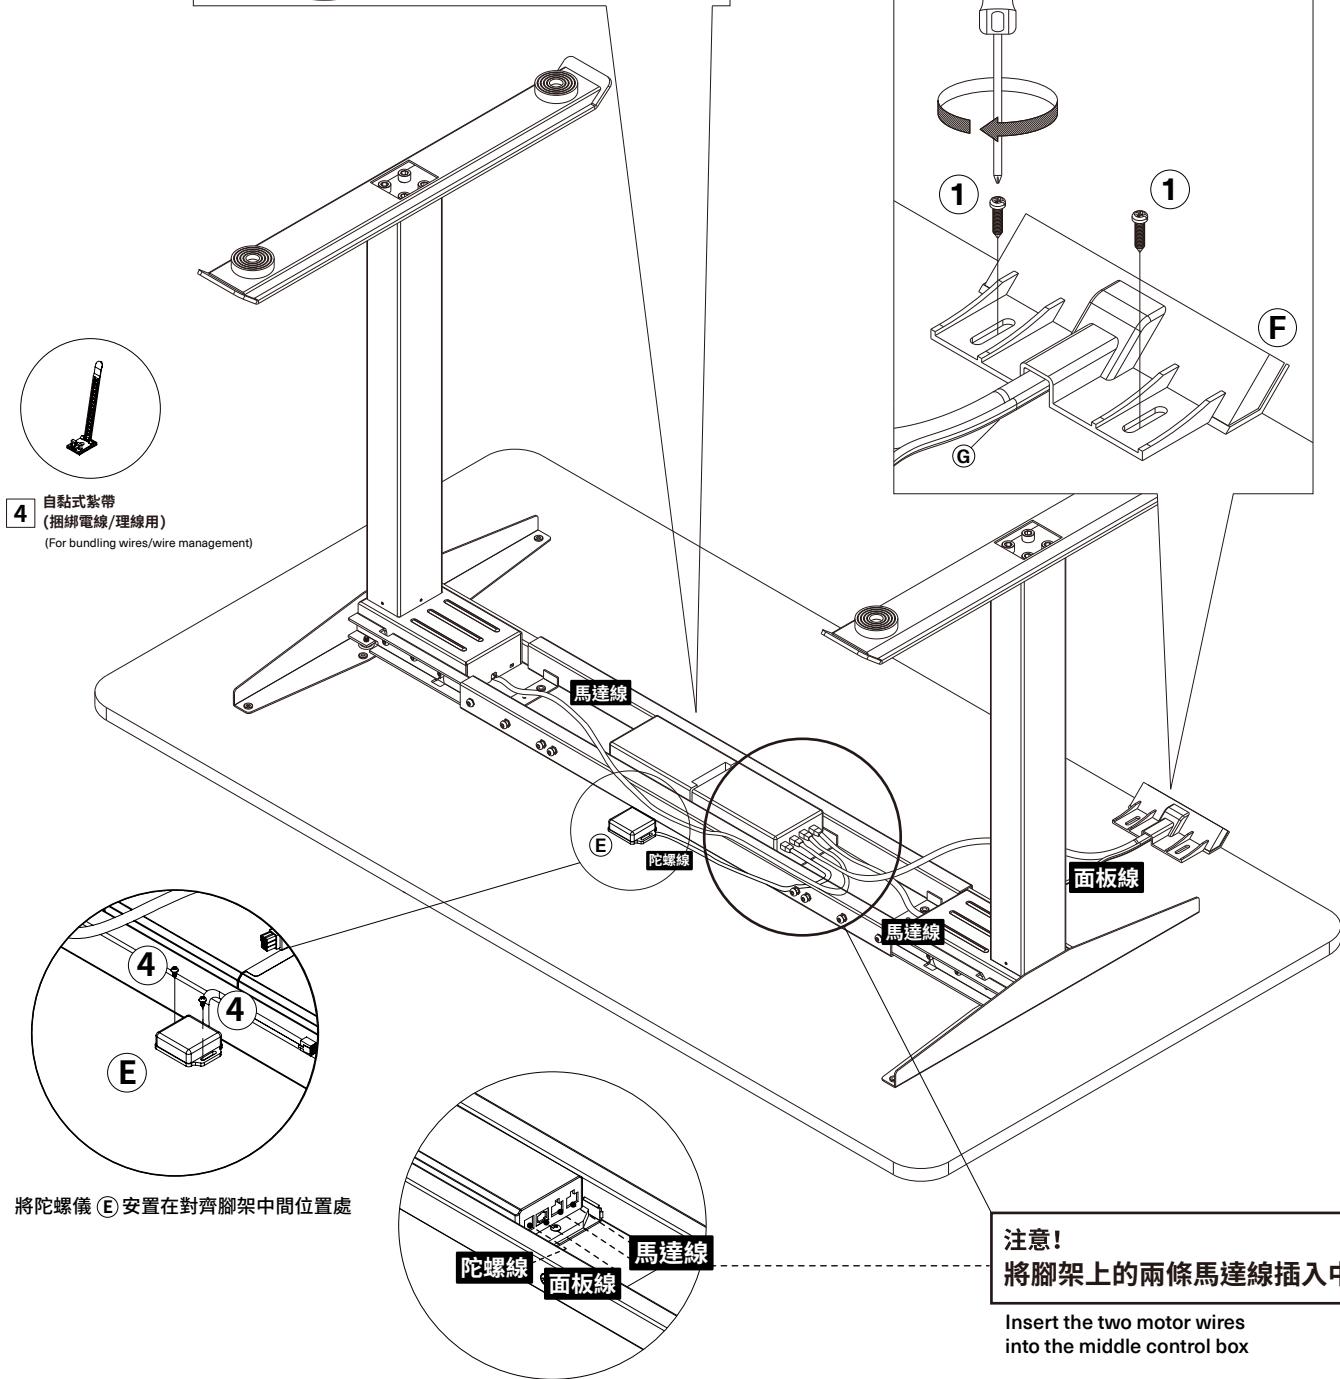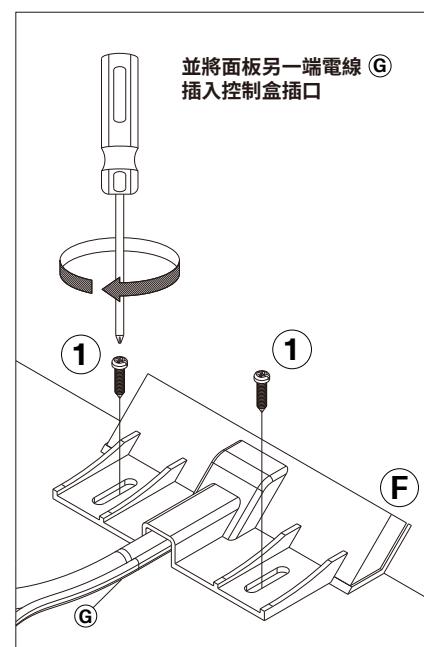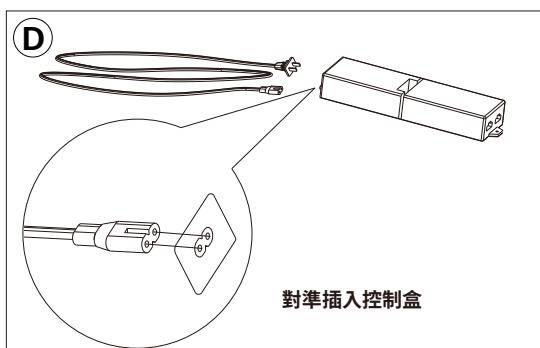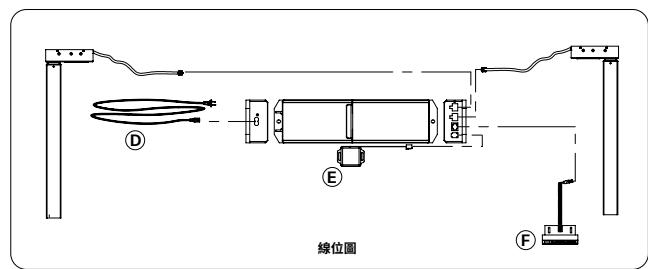

Step 6

可微調桌腳墊的高低
Adjust footpad if needed

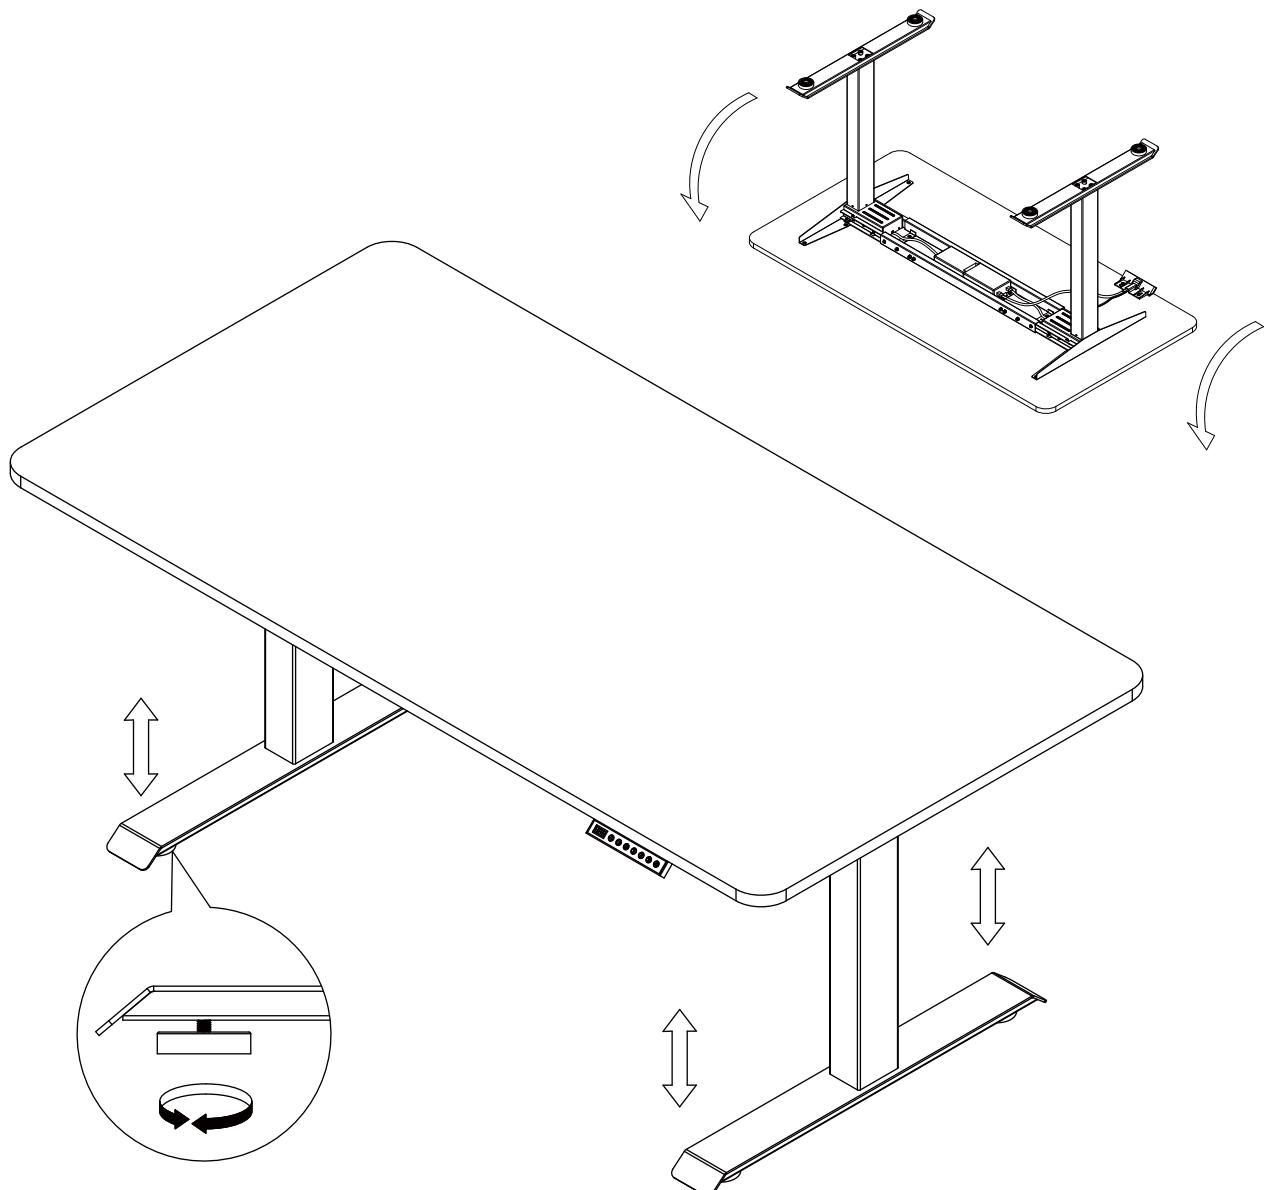

MAX:150KG

單邊荷重:60KG

(SIDE LOADING)

